


# Procedure to remove / breach a dam<sup>1</sup>

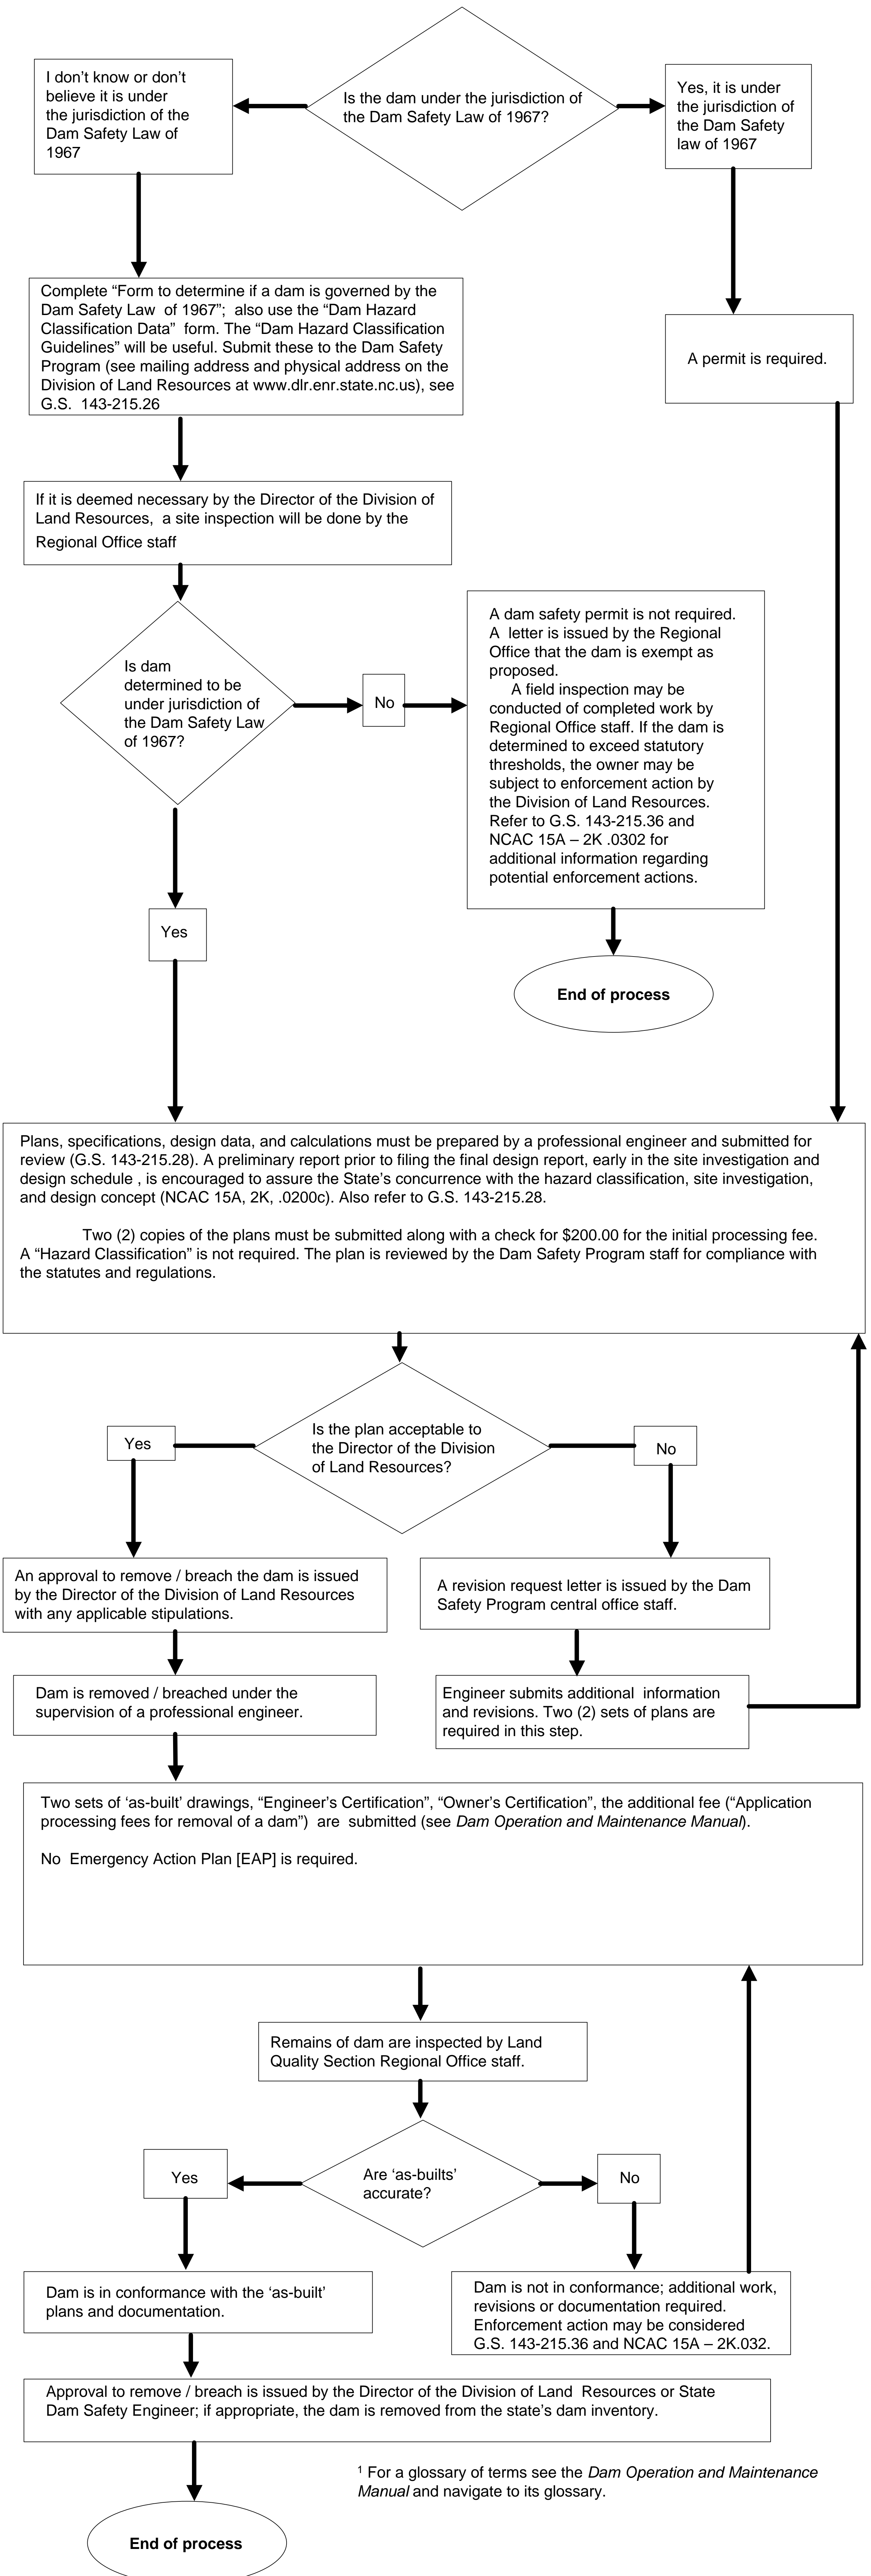

<sup>1</sup> For a glossary of terms see the *Dam Operation and Maintenance Manual* and navigate to its glossary.